



PHILIPS



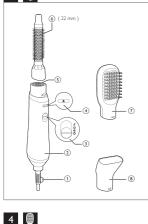

2

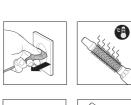

5 (22 mm



3 *









prevent negative consequences for the environment and human health 2

-Do not throw away the appliance with the normal household waste at the end of its life, but hand it in an official collection point for recycling. By doing this, you help to preserve the environment

· Do not operate the appliance

Always return the appliance to

a service centre authorized by

Repair by unqualified people

could result in an extremely

Electromagnetic fields (EMF) This Philips appliance complies with all applicable standards and regulations regarding exposure to

electromagnetic fields Recycling

Philips for examination or repair.

hazardous situation for the user.

with wet hands.

Before styling your hair

-Follow your country's rules for the separate collection of electrical and electronic products. Correct disposal helps

- Note: Always let the appliance and attachments COOL down before you connect or disconnect the attachments.
- 1 Dry your wet hair with a clean towel first as the appliance is most effective on towel-dry hair
- 2 Snap a suitable attachment onto the handle (2) in Fig.1) with the grooves aligned ((2) in Fig 3) → You will hear a "click" and the attachment is locked in

To select a suitable attachment for the hairstyle you want,

please refer to the table below:

Hairstyle	Attachment
Dry hair	Nozzle (®)
Create natural straight hair	Paddle brush(③)
Create inward/outward flicks and natural waves	22mm Thermobrush ((6)

Style your hair

- 1 Connect the plug to a power supply socket.
- 2 Slide the airflow switch (3) in Fig.1) to strong and hot airflow & for fast drying, ThermoProtect setting of for gentle airflow to prevent your hair from overheating.
- You can also select warm airflow

 for slow styling. Dry your hair

1 Select the nozzle (® in Fig.1) and attach it onto the handle (② in Fig.1).

- 2 Dry your hair with suitable airflow settings.

- Create natural straight hair (Fig.4)
- 1 Put the paddle brush (7) in Fig.1) on your hair.
- 2 Brush through your hair slowly with the naddle brush just
- like how you would with a normal brush
- . Brush your hair backward as you like
- Tip: You may brush underneath your hair to give more movement to your hair
- 3 When finished, use your fingers to shape your hair.
- Create inward/outward flicks and natural waves (Fig.5) 1 Comb your hair and divide it into several locks of hair. 2 Take a lock of hair, and brush it with the thermobrush
- downwards. Then, at the hair tips turn the brush inwards or outwards
- 3 Hold the brush in that position for 7 to 10 seconds, and then remove it from your hair
- Repeat step 2 and 3 to the rest of your hair 4 When finished, use your fingers to shape your hair ends.
- Adjust the flicks as you like

After use

- 1 Switch off the appliance and unplug it.
- 2 Place it on a heat-resistant surface until it cools down. 3 To disconnect the attachment, press the release button
- (4) in Fig.1) and pull it off. 4 Remove hairs and dust from the appliance and
- 5. Clean the appliance and attachments with a damp cloth
- 6 Keep the appliance in a safe and dry place, free of dust. 7 You can also hang it with the hanging loop (1) in Fig.1).

Guarantee and service

If you need more information or if you have any problems, please visit the Philips website at www.philips.com/support or contact the Philips Customer Care Centre in your country (you can find its phone number in the worldwide guarantee leaflet). If there is no Consumer Care Centre in your country. go to your local Philips dealer.

5 Troubleshooting

Problem Cause

The appliance does not work at all.	The power socket to which the appliance has been connected may be broken.	Check the appliance is plugged in correctly. Check the fuse for this power socket in your home.
	The appliance may have overheated and switched itself off.	Unplug the appliance and let it cool down for a few minutes. Before you switch on the appliance again, check the grilles to make sure they are not blocked by fluff, hair, etc.
	The appliance may not be suitable for the voltage to which it has been connected.	Ensure that the voltage indicated on the type plate of the appliance corresponds to the local power voltage.

简体中文

感谢您的惠顾,欢迎光临飞利浦!为了 您能充分享受飞利浦提供的支持,请在 www.philips.com.cn/welcome 注 册您的产品。

重要事项

使用产品之前,请仔细阅读本用户手册, 并妥善保管以供日后参考。

- •警告:请勿在靠近水的地方使用本 产品。
- ·在浴室内使用产品后需拔下插头. 即使产品已关闭,近水放置仍存在 危险。
- 警告,不要在盛水的浴缸、淋浴、 洗脸盆或其他器皿附近使用本
- 警告符号注释: 禁止在洗澡
- 或淋浴时使用。
- 使用后务必拔下产品的插头。
- 如果产品过热,它将自动关闭
- 电源。拔掉产品插头,让其冷却几 分钟。再次启动产品之前,请检查 出风口,确保其未被绒毛、头发等 杂物堵塞。
- · 如果电源软线损坏, 为了避免危 险,必须由制造商、其维修部或类 似部门的专业人员更换。
- ·本产品适合由 8 岁或以上年龄的儿 童以及肢体不健全、感觉或精神上 有障碍或缺乏相关经验和知识的人 士使用,但前提是有人对他们使用 本产品进行监督或指导, 以确保他 们安全使用,并且让他们明白相关

的危害。不得让儿童玩耍本产品。




English

Congratulations on your purchase, and welcome to Philips! To fully benefit from the support that Philips offers register your product at www.philips.com/welcome

Important

Read this user manual carefully before you use the appliance and keep it for future referen

- WARNING: Do not use this appliance near water
- When the appliance is used in a bathroom, unplug it after use since the proximity of water presents a risk, even when the appliance is switched off.
- WARNING: Do not use this appliance near bathtubs, showers, basins or other vessels containing water.

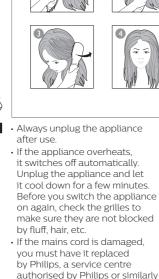

qualified persons in order to

This appliance can be used

by children aged from 8 years

and above and persons with

avoid a hazard.

- reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
 - · For additional protection, we advise you to install a residual current device (RCD) in the electrical circuit that supplies the bathroom. This RCD must have a rated residual operating

- current not higher than 30mA. Ask your installer for advice.
- · Do not insert metal objects into the air grilles to avoid electric shock
- · Never block the air grilles.
- · Before you connect the appliance, ensure that the voltage indicated on the appliance corresponds to the local power voltage.
- Do not use the appliance for any other purpose than described in this manual.
- · Do not use the appliance on artificial hair

- · When the appliance is connected to the power, never leave it unattended.
- · Never use any accessories or parts from other manufacturers or that Philips does not specifically recommend. If you use such accessories or parts, your guarantee becomes invalid.
- Do not wind the mains cord round the appliance.
- · Wait until the appliance has cooled down before you store it.
- · Do not pull on the power cord after using. Always unplug the appliance by holding the plug.

不要让儿童在无人监督的情况下讲 行清洁和保养。

为了增加保护,建议在浴室供电的 电气回路中安装一个额定剩余工作 电流不超过 30mA 的剩余电流装 置(RCD)。详情请向RCD安装商 咨询。

 切勿将金属物体插入风□. 以免触电

- 切勿阻塞电吹风风口。
- 连接产品之前,请确保产品上标示 的电压与当地电源电压相符。
- 请勿将本产品用于本手册中说明以 外的任何其它用涂。
- 请勿对假发使用本产品。
- 当产品连接了电源时,切勿让其无 人看管。
- 切勿使用由其它制造商生产的。 或未经飞利浦特别推荐的任何附件 或部件。如果使用此类附件或
- 部件, 您的保修将失效。 切勿将电源线缠绕在产品上。
- 待产品完全冷却后再存放。
- · 使用后请勿拉扯电源线。拔下产品 2 用合适的风速设置吹干头发。 插头时, 请握紧插头。
- 切勿用湿手操作本产品。
- 产品只能送到飞利浦授权的服务中 心检修。由不合格人员进行修理可 能将用户置于极度危险的境地。

电磁场 (EMF)

本飞利浦产品符合所有有关暴露于电磁场 于蓬松感。 的适用标准和法规。

- 奔置产品时,请不要将其与一般生 活垃圾堆放在一起; 应将其交给官 方指定的回收中心。 这样做有利于 环保。

-请遵循您所在国家/地区的电器及电子 产品分类回收规定。 正确弃置产品有助 干避免对环境和人类健康造成负面影响。

2 塑造发型前

注意: 在连接或拆开附件之前, 请务 必先让产品及其附件冷却。

- 1 应先用干净的毛巾擦干湿发,因为本 产品对用毛巾擦干的头发最有效。
- 2 将合适的附件装入手柄(图 1 中的 ②) 使凹槽对齐(图 3 中的 ②)。
- → 您将听到"咔哒"一声,表示附件 已锁定到位。

要为所需发型选择合适的附件,请参阅

发型	附件	
吹干 头发	集风嘴 (⑧)	
打造自然丰 盈的直发	头皮按摩梳 (⑦)	
打造内卷/ 外翻的卷发 和自然的波 浪卷	22 毫米热效发梳(⑥)	

3 塑造发型

- 1 将插头连接至电源插座。
- 2 将风速开关(图 1 中的 ③)滑动至 强劲的热风 2. 可快速吹干: 滑动至 恒温护发设置 ②,可产生柔风,防止 头发过热。 您也可选择暖风 ●为您的秀发造型。

吹干头发

- 1 选择集风嘴(图 1 中的 ®),将其 安装到手柄上(图 1 中的 ②)。

打造自然丰盈的直发(图4)

- 1 将头皮按摩梳(图 1 中的 ⑦)放在 您的头发上。
- 2 用头皮按摩梳缓慢地梳理您的头发,就 像您使用普通发梳。
- 按您喜欢的方式向后梳理头发。

提示: 您可以只梳理发根, 以使秀发更富

3 完成后,请用手指为您的秀发造型。

打造内卷/外翻的卷发和自然的波浪卷 (22毫米热效发梳,图5)

- 1 梳理头发,并将其分成数绺头发。
- 2 取一绺头发,用热效发梳向下梳。然 后, 在发梢处将发梳向内或向外转动。
 - 3 将发梳保持在该位置 7 到 10 秒, 然 后移走发梳。

重复步骤 2 和 3为其余头发造型。

4 完成后,请用手指为您的秀发末梢 造型。您可以根据喜好整理发档。

使用后:

- 1 请关闭产品并拔下电源插头。
- 2 将产品置于隔热表面上,直至其冷却。
- 3 要卸下该附件, 请按释放钮(图 1 中的 ④),然后将其拔下。
- 4 清除产品和附件上的毛发和灰尘。
- 5 使用湿布清洁产品及其附件。
- 6 将产品存放在安全、干燥、清洁的
- 7 您也可以使用挂环(图 1 中的 ①) 将产品挂起存放。

4 保修与服务

如果您需要更多信息或有任 何问题,请访问飞利浦网站 www.philips.com.cn/support, 或联 系您所在国家/地区的飞利浦客户服务中 心(可在全球保修卡中找到其电话号 码)。如果您所在的国家/地区没有飞利 浦客户服务中心, 请向当地的飞利浦经销 商求助。

问题	原因	解决方法
	产品所连 接的电源 插座可能 已损坏。	检查设备已正确 插入。 检查您家中电源插座 的保险丝。
	产品可能 过热,因 此自动 断电。	****
	产品连接 的电源电 压可能与 产品电压 不符。	标示的电压与当地电
保留备月 出版日期	用 期:2017-0	D8-11
PHI 产品		飞利浦美发造型器 HP8663

上海市天目西路218号1602-1605

本产品根据国标GB4706.1-2005.

及GB17625.1-2012制造

全国顾客服务热线: 4008 800 008

GB4706.15-2008, GB4343.1-2009





保修及服务:

此产品是一件设计精良,用高品质元件制造之家用电器,在 正常使用及保养下应能发挥其优越性能。在购买日期后二 年内, 若发生任何因制造工艺或元器件造成之损坏, 飞利浦 中国维修服务中心将为持证用户提供免费门市维修服务, 视情况更换零件或整个产品。

无论在保期中或保期后,只要飞利浦正式行销该产品的任 何国家皆可获得维修服务。

若飞利浦在当地无行销该项产品,飞利浦同样提供维修服务, 但可能因未储备所需零件,维修时间可能较长,敬请见谅。 请联络当地飞利浦经销商,或飞利浦服务部门。

若您需洽询相关资讯,或遇困难事项时,请联络当地飞利浦 维修服务中心,或向飞利浦服务热线咨询。

中国顾客服务执线, 4008 800 008 (用户需承担本地通话费)。

网址: http://www.philips.com.cn

网上会员注册与产品注册:

- 1) 登陆 http://www.philips.com.cn/welcome
- 2) 点击"创建新账户", 创建您的飞利浦账号
- 3) 点击"注册产品", 通过产品名称或产品型号查找产品。 完成产品注册

保修条例:

* 在购买日期后二年内, 凡经本公司特约维修站人员确认为 正常使用情况下, 因制造工艺或元器件造成之损坏, 您都 将获得免费保修服务。

此保用卡在中国适用

用户请保留此卡

- * 此免费服务不包括需时常更换的易耗零配件(吸尘机纸袋, 布袋, 空气清新机滤网, 滤芯, 活性碳, 咖啡壶过滤网) 及 附件(如须刀网膜、刀头,咖啡杯,食品加工机杯/刀具等), 辅助装置,运输费及维修人员上门服务费。
- * 用户请保留此联。
- * 维修时请携同此证及发票正本。
- * 此证若经涂改即作废。
- * 此证须联同发票下本使用方为有效。
- * 以下情况将不能获得免费服务
- 1. 使用不当引起的人为损坏, 例如接入不适当电源、使用不 适当配件、不适当之安装、不依说明书使用、错误使用或 疏忽而造 成损坏等。因运输及其他意外而造成之损坏。 非经本公司认可之维修和改装。其他因不可抗力(如自然 灾害、电压异常等)造成的损坏。
- 2.一般家庭以外使用(如工业、商业用)而造成的损坏。
- 3.正常使用引起的产品老化、磨损等,但不影响产品的正常 使用。
- * 此证仅在中国境内有效。
- * 保修证作为在规定期限及条件之内进行免费维修的保证 并不限制消费者的法定权利。

服务须知

需要此产品的售后服务, 拨打服务热线: 4008 800 008 在维修服务过程中有任何意见, 欢迎致函飞利浦优质生活 服务办事处解决疑难。

飞利浦(中国)投资有限公司

飞利浦优质生活客户服务部

中国上海市田林路888弄10号

飞利浦创新科技园1号楼

邮政编码: 200233 传真: (021) 5445 2663

4222.005.0422.2