

PHILIPS

NORELCO

Shaver 9400

Wet & Dry Shaver
Series 9000

Dual SteelPrecision blades

Motion Control sensor

ComfortGlide Rings

360° Contour heads

S9502/83



Superior closeness*, personalized skin comfort with SenseIQ Technology

Philips Norelco Shaver 9400 delivers a smooth shave while reducing skin irritation. Only Philips has ComfortGlide rings, a special anti-friction coating to protect your face from redness and irritation.

For a convenient shave

- Get a convenient dry shave or a refreshing wet shave
- LED display with intuitive icons
- One-touch open for easy cleaning
- Rubber grip for comfortable anti-slip handling
- Pop-up trimmer for mustache and sideburns
- Up to 60 minutes of cordless shaving with a 1-hour charge

SenseIQ technology

- Master your technique with the Philips GroomTribe app
- Adjusts to your beard for effortless shaving
- Guides you to an improved technique with fewer passes

A closer shave

- Advanced precision for a close shave*
- ComfortGlide rings protect your face from irritation.

Wet & Dry Shaver Series 9000

Shaver 9400

S9502/83

Highlights

Dual SteelPrecision blades



With up to 150.000 cutting actions per minute, the Dual SteelPrecision blades shave close. The 72 high-performance blades are self-sharpening and made in Europe.

Smart Hair sensor




The intelligent sensor reads facial hair density 500 times per second and auto-adapts cutting power for an effortless and gentle shave.

Motion Control sensor



Motion-sensing technology tracks how you shave and guides you to the optimal movements. After just three shaves, the majority of men achieved a better shaving technique for fewer passes**.

Personalization via app

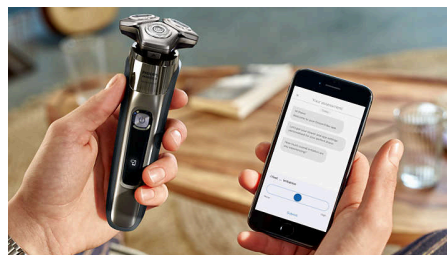

Pair your Philips electric shaver to the GroomTribe app and prepare to master your technique. Just track your progress and personalize your routine to achieve a shave that's both close and kind.

ComfortGlide rings



Shaving heads are surrounded with ComfortGlide rings, a special protective coating with skin gliding properties, to shield your face from irritation.**

Shave wet & dry



Get a convenient dry shave or a more refreshing wet shave with gel or foam - even in the shower.

Pop-up trimmer



Finish your look with the built-in trimmer. It's ideal for maintaining your mustache and trimming your sideburns.

60 minutes of cordless shaving



Shave for up to 60 minutes on a 1-hour charge - that's about 20 shaves - with the powerful Li-ion battery. A 5-minute quick charge gives enough power for one shave. Operates in cordless mode only.

Intuitive display



The intuitive display shows the information you need to get the best experience from your shaver. The LED interface includes: 3-level battery status, cleaning advice and travel lock indicator.

Wet & Dry Shaver Series 9000

Shaver 9400

S9502/83

Highlights

One-touch open



Clean the shaver with ease. At the touch of a button, flip open the shaver head and rinse with water.

Rubber grip



Handle your shaver comfortably and with precision, thanks to anti-slip rubber that makes it easy to keep a secure grip, even when wet.

Wet & Dry Shaver Series 9000

Shaver 9400

S9502/83

Specifications

Accessories

Integrated pop-up trimmer

Travel and storage: Travel case

Software

App: GroomTribe, Connects via Bluetooth®

Software update: Philips offers relevant software updates for a period of 2 years after the date of purchase

Smartphone compatibility: iPhone and Android™ devices

Power

Battery Type: Li-ion

Automatic voltage: 100-240 V

Run time: 60 minutes

Charging: 1 hour full charge, 5 min quick charge

Stand-by power: 0.04 W

Max power consumption: 9 W

Design

Color: Ash gold

Handle: Rubber grip

Shaving heads: Angular

Service

2-year warranty

Replacement head SH91: Replace every year with SH91

Shaving Performance

Shaving system: Dual SteelPrecision blades

Contour following: 360° Contour heads

SenseIQ technology: Smart Hair sensor, Motion Control sensor, Personalization via app, ComfortGlide rings

Ease of use

Wet & Dry: Wet and dry use

Cleaning: One-touch open, Fully washable

Display: LED display, Travel lock, Battery level indicator

SmartClick attachment

Fits product type: RQ585/51 DOES NOT fit angular head type

