

PHILIPS

Hair clipper

Hairclipper series 3000

Stainless steel blades

13 length settings

75mins cordless use/8h charge

Pouch, scissors and beard comb



HC3535/15

Easy, even haircut

Faster clipping without clogging*

Get an easy haircut, quick and easily. DualCut technology with self-sharpening blades clips twice as fast*. Trim-n-Flow technology features a comb designed to prevent clogging - so you can finish your style in one go.

Easy to use

- Quick release blades for easy cleaning
- Up to 75 minutes of cordless use
- Convenient pouch for storage and travel
- Ergonomic design for comfort and control

Performance

- Trim-n-Flow technology for continuous cutting
- Maximum precision with double blades
- Get a perfect but protective trim

Precise length control

- Adjusts to different length settings
- Tames beards and stubble

Built to last

- The blades never need oiling
- Warranty for purchase protection


Hairclipper series 3000

Hair clipper

HC3535/15

Highlights

Trim-n-Flow technology

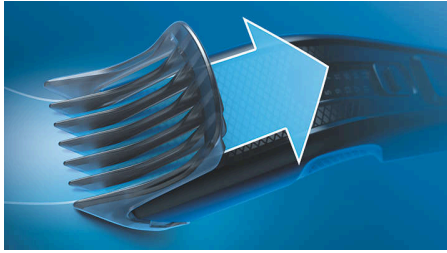

Our Philips hair clipper with new, innovative comb is designed to prevent hair from getting stuck. So you can cut your hair, from start to finish, without interruptions.

DualCut Technology




The Philips Hairclipper 3000 features advanced DualCut Technology for maximum precision. It comes with double blades, and is designed to stay as sharp as day 1.

Stainless steel blades



The self-sharpening steel blades are designed to be incredibly long-lasting. Even after 5 years they cut with the same precision and accuracy as day 1.

13 lock-in length settings

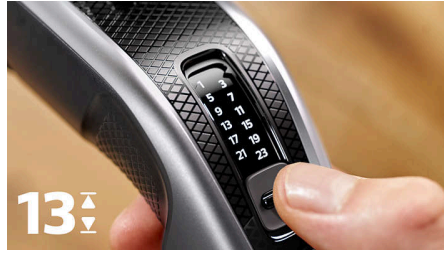

Cut your hair to the exact length you want. Just select one of 12 length settings between 1mm to 23mm at 2mm increments, or remove the comb for a close 0.5mm trim.

Cordless & corded use



Don't get tangled up in your cordless hair clippers – one 8 hour charge provides up to 75 minutes of powerful clipping time. Or keep it plugged in for uninterrupted trimming.

Comfortable grip



Philips clippers have a textured grip designed for easy handling, so you can cut your hair with control and in comfort.

Extra adjustable beard comb




Electric hair clippers to easily trim your beard or stubble, the adjustable beard comb has 12 length settings between 1mm to 23mm at 2mm increments, or you can remove the comb entirely for a close 0.5mm trim.

Storage and travel pouch



Convenient pouch for easily holds everything: clipper, combs and adaptor.

Easy to clean

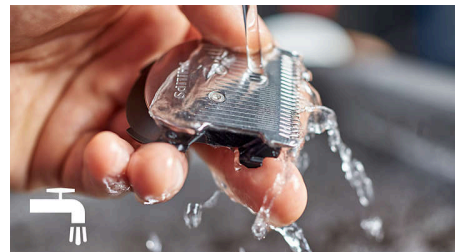

Clean your electric hair clippers with ease. Simply click open the head to release and clean the blades.

Highlights

Zero maintenance



Clipping power that's easy to maintain—our blades never need oiling.

2-year worldwide guarantee



All of our grooming products are built to last. They come with a 2 year warranty, never need to be oiled and are compatible with any voltage worldwide.

Specifications

Accessories

Maintenance: Cleaning brush

Pouch: Travel pouch

Comb: Adjustable hair comb, Extra adjustable beard comb

Barber tools: Scissor

Power

Run time: Up to 75 minutes

Battery type: Ni-MH

Automatic voltage: 100-240 V

Charging: 8 hours full charge

Design

Handle: Ergonomic grip & handling

Service

2-year worldwide guarantee

Cutting system

Cutter width: 41mm

Cutting element: Stainless steel blades

Trim-n-Flow technology

Range of length settings: From 0.5 to 23 mm

Number of length settings: 13

Precision (size of steps): By 2mm

Ease of use

Cleaning: Removable cutter, Washable blades

Maintenance free: No oil needed

Operation: Corded & Cordless use

