

PHILIPS

Smart clothes drying
rack


Split level rods

LED lighting

Automatic lifting

Remote controlling

SDR601ABW0

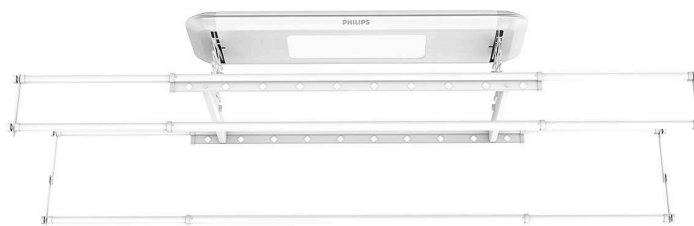

Split level rods

Keep your clothes fully bathing in sunshine

SDR601 makes proper use of space with split level rods, enabling every piece of your clothes to fully bath in sunshine. You can also enjoy smarter clothes drying with LED lighting and automatic rack lifting.

Caring design for more drying possibilities

- To meet different clothes drying needs
- To dry more clothes
- Fit into different sizes of balconies

Designed to ease your life

- Allow rack lifting with one click
- To stop and lift rack with ease

Highlights

35 kg load capacity




SDR601 has 36 hanging holes and an impressive 35 kg load capacity, allowing more clothes to dry at one time. If clothing weigh more than 35 kg, the motor would stop automatically and initiate an alert to warn you, thus ensuring your safety in use.

4 split level rods



The 2 clothes rods have well-distributed holes for hanging, ensuring sufficient ventilation and sunshine for clothes to dry off. 2 more split level rods can dry both clothes and quilts, so you no longer have to worry about how to dry your bedding.

Adjustable rods

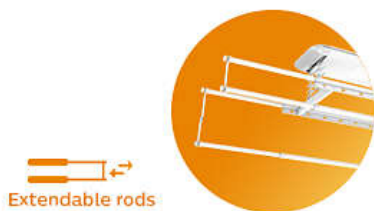

With its 1.2+1 m adjustable rods, the drying rack adapts to many family use scenarios. It gives more drying space when extended and save


space when retracted, making it perfectly fit for small-sized balconies. You can also install it at two sides of your balcony to avoid influencing your leisure activities and the look of the balcony.

Remote control



Enjoy one click on remote control to monitor clothes drying. The DC motor lets the drying rack move quietly and fast. It takes only 20 seconds for the rack to go up or down. Without too much waiting, you can enjoy an efficient life as you like.

Obstacle sensing

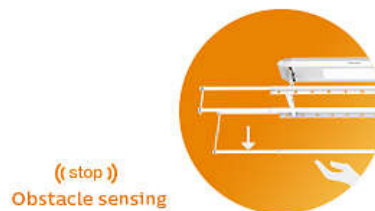

Gently hold the descending rack to stop it. After hanging clothes up, slightly push with your hands, and the rack will go up automatically. No need to turn around for remote control, clothes drying becomes much easier.

Specifications

Color scheme

White

Power supply

Input voltage: 220 V

Rated power of product: 88 W

Rated power of LED lamp: 18 W

Net weight of product

11.5 kg

Dimensions of product (LxWxH)

2,200x513x194 mm

Maximum load

35 kg

Drop distance

0-1,100 mm

