

# PHILIPS

# AVENT



## DECT Baby Monitor

### Audio Monitors

100% private connection

Night light and lullabies

Talkback function



SCD560/01

## The most reliable connection to your baby

### Added support for you and your baby

Our new DECT SCD560/01 Baby Monitor delivers complete reassurance. Providing the most reliable connection with crystal clear sound, temperature control, a soothing night light and lullabies for you and your baby.

#### Reliable technology

- DECT technology guarantees zero interference & 100% privacy
- Perfect clear sound due to DECT Technology

#### Constant Reassurance and Secure Connection

- Always know when your monitor is in range and connected
- Sound level lights indicate if the baby makes noise
- Monitor the temperature in your baby's room
- Energy saving Smart ECO mode

#### Freedom and flexibility

- Range up to 330 meters\*
- Superior operating time up to 18 hours
- Rechargeable parent unit

#### Comforting and soothing your baby

- Stay connected with talk back
- Comforting night light and lullabies to calm your little one

## Highlights

### Zero interference with DECT



DECT technology guarantees zero interference from any other transmitting product like other baby monitors, cordless phones and cell phones. Data encryption provides a secure and private connection, so you can be sure that you are the only one that can hear your baby.

### Perfect clear sound



Hear every tiny giggle, gurgle, and hic-up with perfect clarity. DECT (Digital Enhanced Cordless Telecommunications) technology provides high quality, crystal clear sound so you can hear your baby anytime.

### Smart ECO mode



The unique Smart ECO mode automatically minimizes your transmission power and increases your battery lifetime. The closer you are


to your baby, the less power is needed for a perfect connection (not available in US and Canada).

### Sound activation 3 LED lights



Lights are activated to indicate the level of sound in your baby's room. Even when the Parent Unit is muted.

### Always connected

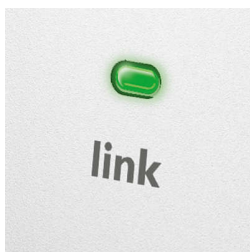

The parent unit will alert you when your monitor is out of range or when the power is low, helping you make sure that you are always connected to your baby.

### Temperature sensor



The temperature sensor with customized alert allows you to monitor the climate in your baby's room. Your baby can't regulate its body

temperature as well as you can and a slight change in temperature can make your baby restless. A customized temperature sensor will immediately alert you, through the digital display on the parent unit, if the climate in your baby's room changes.

### 330m Range



Indoor range up to 50 meters\*. Outdoor range up to 330 meters\*.

### Rechargeable parent unit



The rechargeable parent unit enables you to move in and around the home.


# Highlights

### Operating time up to 18 hours



The small, rechargeable parent unit will give you the freedom of cordless streaming for up to 18 hours before re-charging is required.

### Night light and lullabies

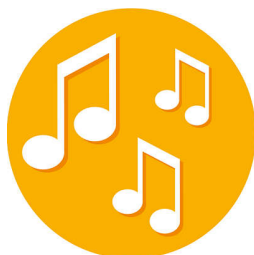

There's nothing like a gentle lullaby and a warm tranquil glow of a night light to calm a restless baby. From any room in the house you can select one of 5 relaxing tunes and switch on the night light, helping your baby to drift effortlessly to sleep in no time. (Remote activation not available in US and Canada).

### Talk back function



Sometimes all your baby needs is the soothing sound of your voice. With one click of this essential feature you can connect with your baby from anywhere around the home.

## Specifications

### Tuner/Reception/Transmission

Frequency band: DECT

Automatic channel selection

### Convenience

Auto out-of-range warning

Battery low indication

Battery charging indication

Volume control

Sensitivity control

Sound-level lights

### Power

Operating time on battery hour: 18 hours

Charging time: 10 hour(s)

Power Supply: 120 V (US), 220 - 240 V

### Technical specifications

Storage temperature range: 10 - 40 °C

Operating temperature range °C: 10 - 40 °C

### Features

Comforting night light

DECT Technology

Indoor range up to: 50m

Energy saving Smart ECO mode: ECO mode, Yes

Linked and in range indication

Outdoor range up to: 330 meters

Talkback function

Temperature sensor

Sound activation lights: 3 LED lights

LCD Screen

Soothing lullabies

### Logistic data

F-box dimensions (W x H x D): 220 x 156 x 94 mm

### Development stages

Stage: Pregnancy, 0 - 6 months

