

PHILIPS

AVENT



Connected

Premium Connected Baby Monitor

Sleep & breathing tracking

Parent Unit works without Wi-Fi

Cry detection and translation

Connect anywhere via app



SCD973/37

Making the invisible visible for total reassurance

SenseIQ wearable-free sleep and breathing tracking

Meet the Philips Avent Premium Connected Monitor. Instantly see your baby's sleep status and breathing rate with SenseIQ; keep an eye on your baby on the 5" Parent Unit or Baby Monitor+ app, and interpret cues with cry translation.

Understand your baby's needs

- See sleep status in real-time
- Helps you interpret your baby's cries
- Understand your baby's sleep schedule

Peace of mind, night and day

- Monitor without recharging for up to 12 hours***
- Create the ideal atmosphere for sleep
- Ultra clear vision, day and night, with or without Wi-Fi
- Protects your family's privacy
- Comfort with lullabies, white noise and soothing tracks
- Monitor safely from the crib or the wall
- Speak and listen to your baby at the same time
- See every wiggle, hear every giggle

Always connected to your baby

- Monitor and feel reassured from anywhere

Highlights

Wearable-free sleep and breathing tracking



Instantly see sleep status and breathing rate without the need for an extra accessory. Our wearable-free tracking technology analyzes millions of pixels per second to spot even the tiniest of motions. It then translates data into sleep and breathing status updates. More reassurance for you and more comfort for your baby.

Parent unit with 5" HD screen



Our Parent Unit with 5" HD screen helps you keep an eye on your little one at home and go about your day. Move easily between indoors and outdoors thanks to a generous 400m range* and a stable connection that works with or without Wi-Fi. See clear video day and night and real-time sleep status updates. Everything you need to rest easy.

Secure Connect System



Know your connection is completely private thanks to our Secure Connect System. It uses multiple encrypted links between the Baby Unit, Parent Unit and app so all data and imagery are protected.

Cry detection and translation



Want to know if your baby is tired, gassy, hungry, uncomfortable or irritated? Our monitor detects and translates cries using a scientifically proven algorithm. You'll receive free in-app access for the first 3 months**, which means there's extra help on-hand during the rollercoaster newborn stage.

Baby Monitor+ app




At home or away, our Baby Monitor+ app is an instant connection to your baby's bedroom and a window into their wellbeing. Watch them on HD video, check their sleep status and breathing rate and get help interpreting cries.

Full HD camera Baby unit



Enjoy an ultra clear view of your baby day and night thanks to the full HD camera on our Baby Unit with night vision. Whether you're at work or thinking about them at midnight, you'll always be able to see the tiniest of wriggles.

2-in-1 crib & wall mount

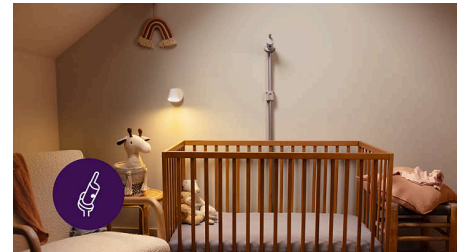

Our Baby Unit attaches securely to the crib or the wall with just one mount. We've designed it especially with safety in mind: keeping cords away and the Baby Unit firmly in place. And all while ensuring you get the best performance from our video-based sleep and breathing tracking.

Automated sleep diary



Our premium monitor automatically logs every sleep, generating insights and helping you better understand sleep states and wake windows. With historical sleep stats from the past 30 days visualised in handy graphs, you'll also be in-the-know about sleep regressions and other changes to your baby's sleep schedule.

Highlights

Soothing songs and white noise




Comfort your little one with tranquil tracks, natural soothing sounds, or white noise. From garden birdsong to classic lullabies and even your own voice recordings, our monitor has all the sounds you need to gently lull your baby into slumber.

Room thermometer & nightlight




Our Baby Unit comes with a built-in nightlight and room thermometer to make sure the room looks and feels just right. It's easy to control the nightlight with the Parent Unit or app. And if the room becomes too warm or cold, you'll receive personalized notifications.

True talk back

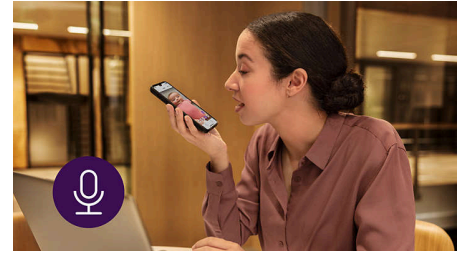

Use your voice to soothe your little one while listening to them at the same time. Our talk back feature makes it easy to comfort your baby without entering the room.

Up to 12 hours battery time***

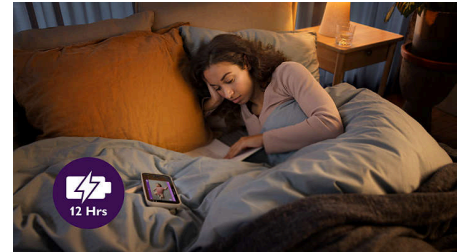

Our rechargeable Parent unit has up to 12 hours of runtime*** so keeping an eye on your little one can easily fit into your routine. Day and night.

Specifications

Features

Connection modes: Direct link (peer-to-peer) and Wi-Fi

Mobile connectivity range: Unlimited, requires internet connection

Range parent unit / baby unit: Up to 400 meters outdoors and 50 meters indoor

Baby unit camera resolution: Full HD 1080p

Parent unit screen size: 5" inch color LCD

Parent unit resolution: 1280*720

Night vision: Yes, automatic

Zoom: Yes, digital zoom and pan

Room thermometer: Yes, incl. alert

Night light: Yes, incl. timer

Talk back: Yes, Talk Back (speak and listen at the same time)

Record personalized sounds: Yes, via app

Phone application (app): Philips Avent Baby Monitor+

Operating systems (app): iOS 11 and higher, and Android 6 and higher

Lullabies, soothing sounds and white noise: Yes, incl. timer, 5 lullabies, 5 soothing sounds, 5 white noise sounds

Breathing tracking: Yes, on parent unit and via app

Sleep tracking: Yes, on parent unit and via app

Cry Translation: Yes, on parent unit and via app

Automated sleep diary

Convenience

Video mode

Audio only mode

Eco mode: Yes, energy saving mode

Privacy mode: Yes, connection only via parent unit and baby unit

Background monitoring (app only): Yes, hear your baby while phone is locked or using other apps

Alerts: Yes, low battery; lost connection; temperature; sound; motion detection

Wall mountable

Mount: Yes, 2-in-1 wall and crib mountable

Power / Transmission

Baby unit power source: Mains only

Parent unit power source: Battery and mains

Parent unit operating time on battery: 12 hrs in Eco mode

Power supply: 5V 1A AC/DC Adapter, Input 100 – 240V / 50 - 60Hz

Frequency band: 2.4 Ghz

What is included

Baby Unit: 1 pcs

Parent Unit: 1 pcs

Mount: 1 pcs

Software Support

Software updates: Philips offers relevant software updates for a period of 2 years after the date of purchase.

Cry Translation: 3-months free usage period starts after activation, Cry Translation is offered by Zoundream™. Terms and conditions apply

