

# PHILIPS

# AVENT



Baby Bottle Sterilizer

Bottle Sterilizer

Advanced



SCF291/01

## Sterilise in minutes and simply store

Sterilize in just 10 mins

Sterilize up to six feeding bottles with accessories in just 10 minutes. The slim but roomy Bottle Sterilizer Advanced is fast and efficient, killing 99.9% of germs\* for peace of mind at every feed.

### Easy to clean and assemble

- This sterilizer is quick and easy to clean

### Integrated drip tray

- Designed to reduce the chance of unpleasant odors

### Kills 99.9% of germs\*

- Say goodbye to harmful bacteria

### Space saving design

- Roomy inside, compact outside
- Our sterilizer is designed for space-saving flexibility

### Sterile for 24 hours

- Stays sterile for 24 hours\*

# Highlights

## Kills 99.9% of germs\*



Sterilizing is gentle, effective and chemical-free with Philips Avent. Every sterilizer uses the power of pure steam – nothing more, nothing less – to kill 99.9% of harmful germs\*.

## The all-in-one solution



Our advanced sterilizer is adaptable, reducing in size for smaller items like soothers, and to minimize your counter-top space when not in use.

## Space-saving design



Our sterilizer is slender and yet still holds up to six Philips Avent baby bottles. It also fits all the other essentials, from teats and soothers to a manual breast pump.

## Sterilize in just 10 mins



Experience speed and safety with the sterilizing cycle lasting just 10 minutes, after which the sterilizer automatically turns itself off.

## Sterile for 24 hours\*




The sterilizer's thorough, chemical-free cleaning will keep its contents sterile for up to 24 hours. How? Just keep the lid on.

## Easy to clean and assemble



Top to bottom, inside and out, the sterilizer is quick and easy to clean – even the heating plate. So you get more time to be with your little one.

## Integrated drip tray

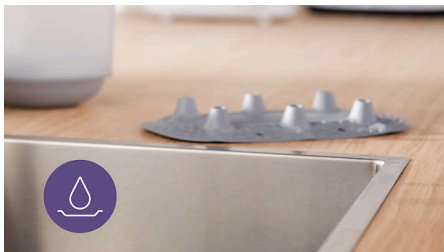

Our new drip tray protects the heating plate from milk droplets, reducing the chance of unpleasant odors.

# Specifications

**Technical specifications**

Power consumption: 650 W  
Voltage: 220-240V~ 50-60Hz, 220V~ 60Hz (Korea), 120-127V~ 60Hz (NAM)  
Safety Classification: Class 1

**Weight and dimensions**

Dimensions: 304 x 183 x 359 mm  
Weight: 1.78 kg

**Design specifications**

Materials: Plastic (PP)

**Country of origin**

Made in: China

**What is included**

Tongs: 1 pcs  
Electric steam sterilizer: 1 pcs

**Compatibility**

Philips-Avent range compatible

**Development stages**

Stage: 0 - 6 months

**Consumer Trade Item**

Height: 37.2 cm  
Width: 20.2 cm  
Length: 32.4 cm  
Net weight: 1.78 kg  
Gross weight: 2.36 kg  
GTIN: 8710103948001  
Country of origin: CN  
Harmonized system code: 85167970

**Outer Carton**

Height: 38.8 cm  
Width: 21.4 cm  
Length: 33.4 cm  
Net weight: 1.78 kg  
Gross weight: 2.84 kg  
GTIN: 18710103948008

**Pallet Layer**

Height: 38.8 cm  
Width: 100 cm  
Length: 120 cm



\* Escherichia coli, Pseudomonas aeruginosa, Staphylococcus aureas, Streptococcus agalactiae, Cronobacter sakazakii, Salmonella enterica, Listeria monocytogenes. The test results are provided by an independent test lab.